



Preincalzitor antigel PRAMAC â?? PHS

Description

Se monteaza numai la generatoarele Pramac cu pornire electrica, (la cheie / automata).

Pentru preincalzirea motorului (a antigelului)

Favorizeaza pornirea la rece (la temperaturi sub 4 grade C) a generatoarelor.

Pentru generatoarele cu motorizari / modelele:

â?? **YANMAR**: GBW10Y / GBW15Y / GBW22Y / GBW35Y / GBW45Y

â?? **PERKINS**: GBW15P / GBW22P / GBW30P / GBW 45P / GSW15P / GSW22P / GSW30P / GSW45P

â?? **VOLVO**: GSW110V / GSW145V / GSW150V / GSW165V / GSW170V / GSW200V / GSW220V / GSW225V